

Deco/Solar Film Installation Instructions

Installation videos are available at our website - www.BasicDeco.com.sg

Pre-Installation Preparation :

Tools :



1. Create wetting solution by adding a few drops of mild shampoo with water.
2. Clean the glass surface with wetting solution.
3. Cut the film 2cm larger than the dimension of the glass surface.

Installation Steps :

Step
1



To separate the transparent backing sheet from the film, tape both sides (front & back) of a corner, pull the tape in opposite direction. To avoid the film from curling up, spray the film's adhesive side with wetting solution as you peel.

Step
2




Spray the wetting solution on the glass surface completely wet with droplets of water. Place the adhesive side of film on the top of the glass surface, adjust the film to the desired position, peel off the remaining liner. Gently smoothen surface by hand to tack the film into its correct position.

Step
3



Smooth out the film with a squeegee from the center to the sides till the film is flat and smooth, with no remaining of bubbles and water.

Step
4

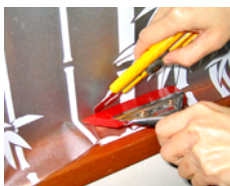

Remove excess film along the edges.

Allow 2 - 3 days for adhesive to set and bond to the glass surface. Do not wash nor disturb during the curing process (For vehicle : Do not unwind the window).
Some film will look foggy/milky until application solution evaporate.

Maintenance & Care

Normal cleaning with mild window cleaner and soft towel.

If you have problem in installation, you may contact us at (65) 6251 9339 for more advise.